 
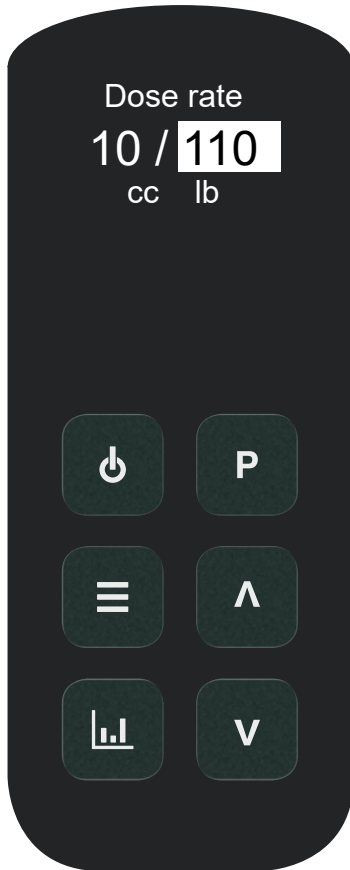 


EasyDose GUN

Quick Start Guide

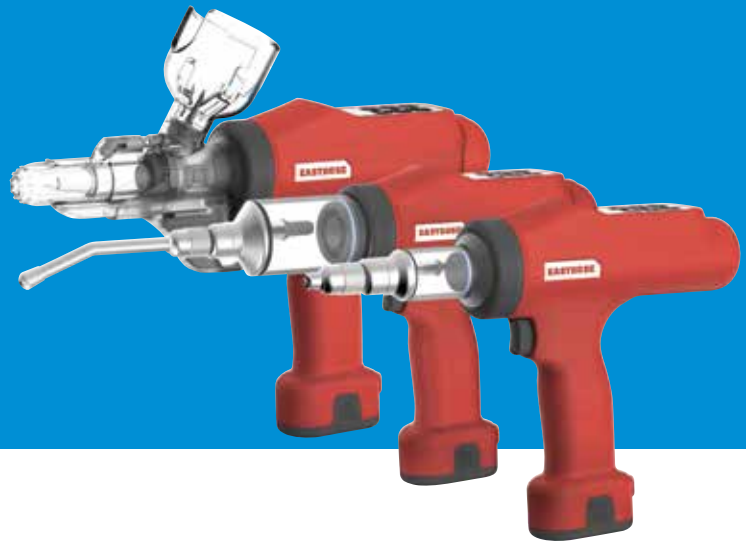

Power Button

Click once to turn on, press and hold momentarily to turn off.



Prime Button

Push this button and pull the trigger to fill the barrel. Point the Gun up to expel any air in the barrel. This gives manual control of the piston. Press P button again for mPrime (Micro prime). This is a slower speed allowing fine control. Click again to exit this mode.

mPrime



Menu Button

Dose mode
volume
weight

Dose Mode: You can use the arrow keys to adjust the dose by volume or weight. If you select Weight then input the dose units and dose rate.



Piston Speed: A further press of this button allows you to adjust the delivery and refill speed. Use the arrow keys to change the speed up or down to suit.



Sound Alert: This setting turns on or off the sound alert at the end of each dose



Dose Delay: This setting prevents double dosing if you accidentally pull the trigger twice by accident. Set to 1s, 2s, or 3s for a forced delay between doses.

Multi Dose
ON OFF

Multi Dose: If you turn this feature ON any dose will be limited to a max of 10ml. A dose larger than 10ml will be automatically be split into equal doses.



Barrel change: Use the Arrow key to select the TICK and follow the prompts to change the barrel and piston.



Statistics button

Push to see the amount of product administered and number of doses.



Up and Down buttons

Push these buttons to adjust the Dose Volume or Weight



**Warning: Improper use could result in injury.
Use device with caution.**

Battery Charging

Take note of the polarity of the batteries. Remove the 2 batteries from the bottom of the Dosing Gun and insert into charger.

Maintenance:

It is imperative that you clean the barrel after every session. Remove the barrel, rinse the barrel with clean, warm water and dry it thoroughly. Remove the inlet and exit valves and clean thoroughly. Lubricate the piston O-ring with petroleum jelly or food/cooking oil.



For technical assistance go to the Owners Hub at www.tepari.com

FOR SERVICE OR REPAIRS CONTACT:

New Zealand: 0800 837 274

Australia: 1800 650 682

United States: 800 315 0433

Rest of world:

800 315 0433

+64 3 433 0077

TE PARI