

Setting up the Gallagher 810 Scale for a Racewell

S for set up


Draft Menu

Press select

Draft off? Press mode for 3 way drafting


Enter Draft limits

OK

Menu  User Opt
Comm. – port 1 – drafter fast

OK

Back to A (auto) for testing

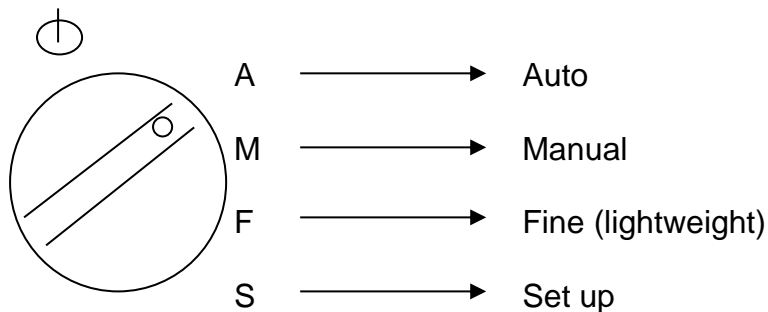

TE PARI PRODUCTS

NEW ZEALAND:
PO BOX 25, 9 ENDEAVOUR CRESCENT, OAMARU 9400.
Ph: +64 3 433 0077 Em: sales.nz@tepari.com
FREEPHONE 0800 837 274

AUSTRALIA:
44 RICKY WAY, EPPING 3076 VICTORIA.
Fx: 1800 669 205 Em: sales.au@tepari.com
FREEPHONE 1800 650 682

USA:
14250 JUDICIAL ROAD, BURNSVILLE, MN 55306, USA.
Em: sales.usa@tepari.com
FREEPHONE 800 315 0433